

Module No. 676

READING THE DISPLAY

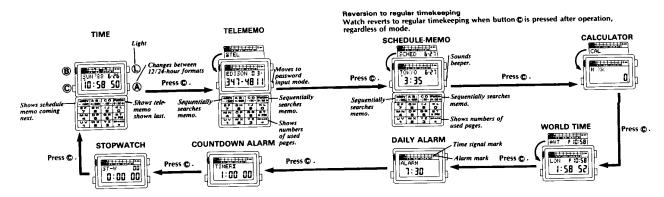


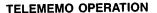

50 sets (pages) of 9 letters and 12 numerals can be memorized. This data base can be utilized as a telephone directory, or memo. Press [amv] or [ruco] to search the memory contents. Keep pressed to search quickly. Used pages are automatically stored in alphabetical order. Password function keeps memories private.

SEARCHING TELEMENO

Password input mo

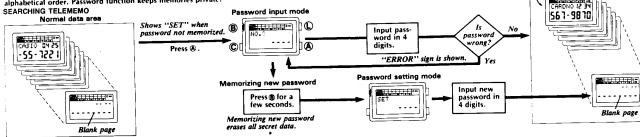


Filing TELEMEMO

Name part (can be input up to 9 characters.)

End mark ® MR.JONES COY 25 -55-1221 🔊 Number part (can be input up to 12 numerals.)

When inputting characters in name part, press appropriate key, press sequentially, if

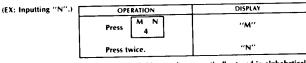

Press

 to complete memorizing and this page is automatically stored in alphabetical order.

When the record is entered with over 7 digits, the display will scroll from right to left to show all the contents.


SCHEDULE-MEMO OPERATION

(B)

50 sets of 12-character message and date/time can be memorized. Beeper sounds for 20 seconds at scheduled time. Memories are shared between TELEMEMO and SCHEDULE-MEMO. Past memo is automatically erased.

Searching SCHEDULE-MEMO

Searching SCHEDULE-MEMO
When the display is converted to this
schedule-memo, next schedule-memo will be
shown. Press well to search the memory
contents sequentially, and well to reverse.
Schedule-memo can be confirmed from this
week to next week using chart. When
regular timekeeping passes time written in
the schedule-memo, the schedule-memo is
automatically erased.

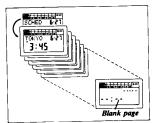

Inputting SCHEDULE-MEMO TUKYO **6-2**7

3:45

0

Secret data area

2) Press ® to enter new data. hΘ


3) Press name/numeral for input. Press ♠ to shift the cursor and ♠ to reverse. Keep pressed for rapid movement. Press A



4) Press ® to complete.


When the record is entered with over 7 digits, the display will scroll from right to left to show all the contents.


SETTING TIME AND CALENDAR

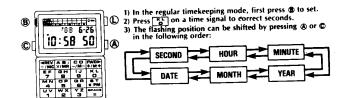

- 4) Press numeral for input.
 5) Press (8) to complete setting.
- Year digits can be set up to the year 2084 by inputting last two digits.
 Schedule-memo can be confirmed from this week to next week using chart.


CALCULATOR OPERATION

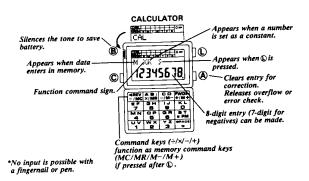

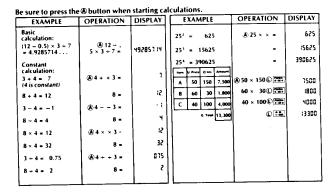


SETTING DAILY ALARM

If the daily alarm is set the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press any button. If the time signal is set, the watch sounds every hour on the hour.

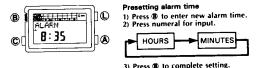

* When the watch is in the 24-hour system, the alarm time is displayed in that system.


ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL

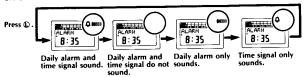


STOPWATCH OPERATION



 A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 23 hours 59 minutes 59.99 seconds. Thereafter it can be reset and started again.




OPERATING WORLD TIME

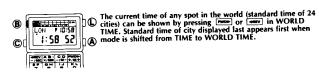

SETTING WORLD TIME
When one of any local standard time is set, all other standard times are automatically

- set.


 1) Press To or To World TIME to select appropriate local time.
 2) Press to set time and date.
 3) Press or to shift flashing digit(s). Digit(s) to be changed will flash.

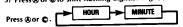

Display automatically returns to TIME if left unused for a few minutes.

CHANGING TO DAYLIGHT SAVING TIME
Hold down @ for a few seconds while in WORLD TIME to change to daylight saving time
(+1 hour). The daylight saving time mark " \(\psi \)" is shown on the display while this
setting is in effect. Repeat this procedure to switch back from daylight saving time to
standard time.

OPERATING COUNTDOWN ALARM

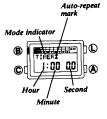


Countdown can be set from 1 minute to 24 hours (display shows 0:00'00), and times to an accuracy of 1 second. Start/stop operation is possible by pressing ®, and is confirmed by a signal. When display reaches zero, beeper sounds for 10 seconds until any button is pressed.

SETTING COUNTDOWN TIME

- Press ® to set new time.
 Each press of © selects auto-repeat or repeat function. The mark (▼) indicates on setting of auto-repeat function
- auto-repeat function.

 Press (a) or (a) to shift flashing digit(s). Digit(s) to be changed will flash.

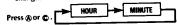

- 4) Press numeral for input.5) Press to complete setting.

Auto-retrieve function
Display automatically returns to initial countdown timer if left unused for a few
minutes.

Auto-repeat function
Pre-entered time is retrieved and started again when display reaches zero.

Repeat function
Pre-entered time is retrieved when display reaches zero.