

CASIO®

PRINTED IN JAPAN
IMPRIME AU JAPON

UG1282B

5


CASIO

Module No.210

User's Guide/Warranty Certificate

Dear Customer,
Congratulations on your purchase of this Casio
Digital Quartz Watch.
Although highly sophisticated, this watch is
delightfully simple to use, and by referring to
this guide you will enjoy all the features of this
reliable ultra-precise timepiece.

Reading the display

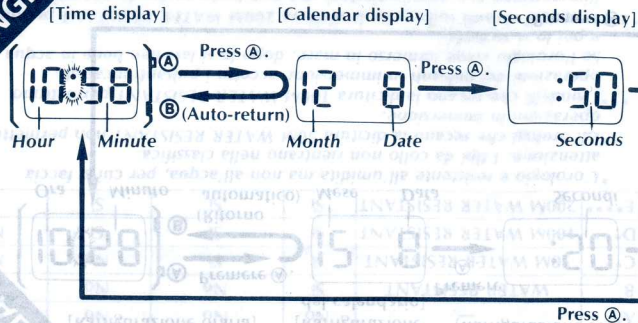

(Auto-return function) The calendar display will automatically return to the time display in three seconds.

Readjusting errors up to ± 30 seconds

1. Press (B). Second digits start flashing.
2. Press (A) on a time signal.
3. Press (B) for 2 seconds to complete.

Setting time and calendar

1. Press (B) twice to set minute digits. One minute advances with every push of (A).
2. Press (B) to set hour digits. One hour advances with every push of (A). Check whether AM (H) or PM (P) is lit.
3. Press (B) to set date digits. One date advances with every push of (A).
4. Press (B) to set month digits. One month advances with every push of (A).
5. Press (B) to complete.

Note: As the calendar system is set at 28 days for February, reset March 1 to February 29 each leap year.

(2-step digit advance) When the (A) button is pressed for more than 2 seconds, the display advances in 2-digit steps. When released, the digit advance will stop.

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the (B) button repeatedly.

(Reversion to time display) The watch reverts to the time display, if the (B) button is pressed for more than 2 seconds, regardless of the digit setting mode.

- Avoid exposing the watch to strong chemicals such as gasoline, cleaning solvent, aerosol spray, adhesive agent, paints, etc. whose chemical action will destroy the seals, case and finish.

Specifications

Accuracy at normal temperature: ± 15 seconds a month

Display capacity:

- Hours and minutes display
- Month and date display
- Seconds display

Calendar system: Auto-calendar set at 28 days for February

Battery: One silver oxide battery (type: No. 379)

Approx. 12 months operation on type No. 379

Warranty Certificate

THIS WARRANTY CERTIFICATE IS VALID ONLY FOR SERVICE IN THE COUNTRY OF PURCHASE.

Should this watch malfunction under normal use, it will be repaired without charge for a period of one year from the date of purchase. If the watch requires service within the warranty period, request repair or adjustment at the store where purchased or the authorized Casio watch distributor, presenting the watch together with this warranty certificate. The customer shall not have any claim under this warranty for repair or adjustment expenses if:

- (1) The trouble is caused by improper, rough or careless treatment.
- (2) The trouble is caused by a fire or other natural calamity.
- (3) The trouble is caused by improper repair or adjustment made by anyone other than the authorized Casio watch distributor or its retailers.
- (4) The case, band, glass or battery is damaged or worn.
- (5) This warranty certificate is not presented when requesting service.
- (6) The name and address of the authorized distributor or the retailer are not stamped in the warranty certificate.
- (7) The date of purchase, model name and manufacturing number are not entered in the warranty certificate.

- *The above warranty applies to regions other than the United States of America.*
- *United Kingdom — This undertaking is in addition to consumers statutory rights and does not affect those rights in any way.*

Care of your watch

- **Battery Life:** 12-month battery life starts when battery is factory installed. At first sign of power fade (dim display), renew battery at sales store or Casio distributor.
- As this watch contains precise electronic components, it is suggested that the back cover be removed by authorized personnel.
- Your watch is ranked A through E according to the water resistance chart below: Check the ranking of your watch to determine proper use.

Rank	Case Designation	Splashes, rain, etc.	Swimming, car-washing, etc.	Snorkeling, diving, etc.	Scuba diving
A*	—	No	No	No	No
B	WATER RESISTANT	Yes	No	No	No
C**	50M WATER RESISTANT	Yes	Yes	No	No
D***	100M WATER RESISTANT	Yes	Yes	Yes	No
E****	200M WATER RESISTANT	Yes	Yes	Yes	Yes

*The watch is sweat-resistant but not water-resistant. So be careful not to get it wet. The pendant type does not meet sweat-resistant levels.

**50M WATER RESISTANT casing model does not permit underwater button operations.

***100M WATER RESISTANT casing model permits underwater button operations (except where buttons are countersunk).

Should the watch be exposed to sea water, wash it well with fresh water and wipe dry.

****200M WATER RESISTANT casing model withstands scuba diving use (except diving using helium-oxygen gas).

- A waterproof rubber seal is used to exclude water and dust. As rubber deteriorates after long usage, the seal should be replaced periodically (every 2—3 years).
 - Should water or condensation appear in the watch, immediately have it overhauled because water can corrode electronic parts inside the case.
 - Avoid exposing it to extremely high and low temperatures.
 - Although the watch is designed to withstand shocks under normal use, it is inadvisable to subject it to hard knocks — rough usage or drops onto hard surfaces —.
 - Avoid fastening the band too tightly. You should be able to insert your finger inside the band.
 - Clean the watch and bracelet with a soft cloth, dry or moistened with mild soap. To avoid surface damage, never use volatile chemicals (such as benzine, thinners, spray cleaners, etc.).
 - Gold plated surfaces can be kept in good condition by regular wiping with a soft damp cloth. Discoloration can be removed with detergent.
- Always keep unused watches in a dry place.