


Module No. 304/306/308


READING THE DISPLAY

(Module No. 306/308)

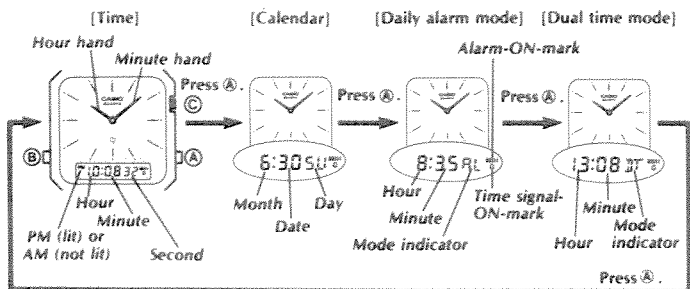


(Sound demonstration) Press and hold the (A) button to sound the beeper.

(Module No. 304)

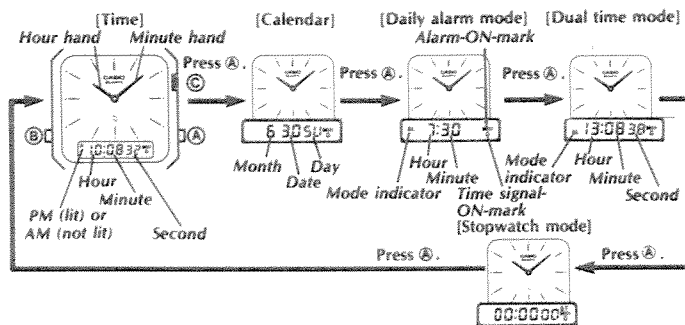


(Sound demonstration) Press and hold the (A) button to sound the beeper.

SETTING DIGITAL TIME

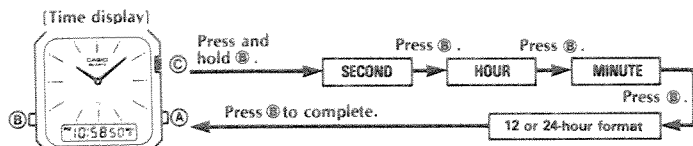


- Press and hold (C) in the time display to set time.
 - Press (A) on a time signal to correct seconds.
 - Press (A) to shift flashing digit(s). The digit(s) to be change will flash.
 - Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
- * In the case of 12/24-hour selection, each press of (A) switches the display between 12-hour and 24-hour format alternately.
- (Auto-retrieve function)
If no button is pressed for a few minutes, the display automatically returns to the regular timekeeping mode.
- Press (A) to complete.

 SETTING ANALOG TIMEKEEPING



SETTING CALENDAR

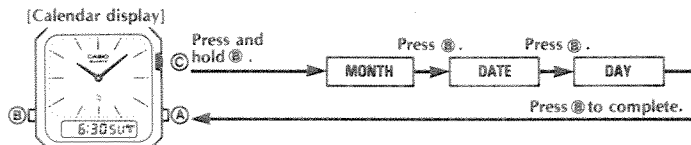


- Press and hold (C) in the calendar display to set calendar.
- Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
- Press (A) to shift flashing digit(s). The digit(s) to be change will flash.
- Press (A) to complete.

SETTING DAILY ALARM TIME


If the daily alarm is set the beeper sounds for 20 seconds at the preset time every day until cleared. To stop the beeper while sounding, press the (A) or (B) button. If the time signal is set, the alarm sounds every hour on the hour.

(Daily alarm model)

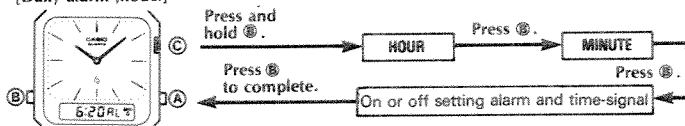

- Press and hold (C) in the daily alarm mode to set time.
 - Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
 - Press (A) to shift flashing digit(s). The digit(s) to be changed will flash.
- * In the case of daily alarm and time-signal on or off setting, the display changes as shown below with every press of (A).


* In the case of daily alarm and time-signal on or off setting, the display changes as shown below with every press of (A).

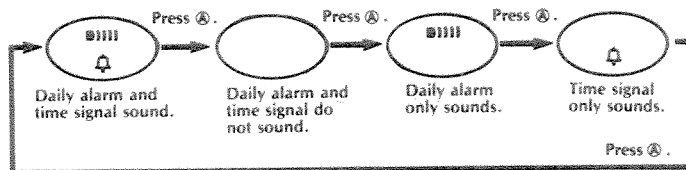

(Auto-retrieve function)
If no button is pressed for 2 to 3 minutes in the alarm setting mode, the display automatically returns to the initial alarm mode display.

* When the watch is in the 24-hour system the alarm time is also displayed in the 24-hour system.

SETTING DUAL TIME

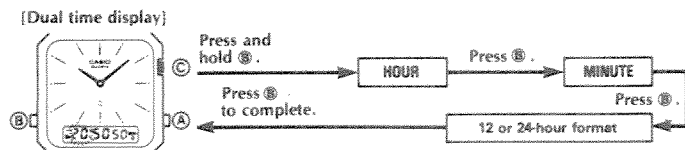


- Press and hold (C) in the dual time display to set time.
 - Each press of (A) increments the digit by one. Keep pressed to move at a high speed.
 - Press (A) to shift flashing digit(s). The digit(s) to be change will flash.
- * In the case of 12/24-hour selection, each press of (A) switches the display between 12-hour and 24-hour format alternately.

(Auto-retrieve function)
If no button is pressed for 2 to 3 minutes, the display automatically returns to the regular timekeeping mode display.

4) Press (A) to complete.

STOPWATCH OPERATION (Module No. 304 only)

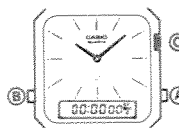

Press (C) to start or stop.
Press and hold (C) to reset.
A signal confirms start/stop operation.
(Working range) The stopwatch display is limited to 59 minutes 59.99 seconds, for longer times reset and started again.