Module No. 808/809/827/917/927

READING THE DISPLAY

[Module No.808] [Module No.809]
[Module No. 917] [Module No. 927]

Regular timekeeping
[Time] [Calendar]
Time signal / ON mark
Minute hand / PM
Hour hand / Second
Press Ⓛ.
Press Ⓛ.
Month
Hour / Second
Minute / Date
Month
[Module No. 827] Changes between 12/24-hour formats
Minute hand / Second
Hour hand

[5 daily alarms]
ON/OFF indicator
Press Ⓒ.
Alarm No.
Minute
Hour
Mode indicator

[Dual time]
Minute / Second
Hour
Press Ⓒ.
Regular timekeeping
Mode indicator

[Countdown alarm]
Minute / Second
Hour
Press Ⓒ.
1/10th of a sec.
Mode indicator

[Stopwatch]
Minute / Second
Hour
Press Ⓒ.
1/100th of a sec.
Mode indicator
Press Ⓒ.

(Reversion to regular time) The watch reverts to regular timekeeping when the Ⓒ button is pressed after operation.

SETTING TIME AND CALENDAR
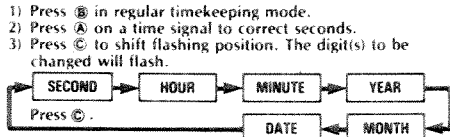

1) Press Ⓑ in regular timekeeping mode.
2) Press Ⓐ on a time signal to correct seconds.
3) Press Ⓒ to shift flashing position. The digit(s) to be changed will flash.

SECOND → HOUR → MINUTE → YEAR
Press Ⓒ.
DATE ← MONTH

4) Each press of Ⓐ or Ⓛ corrects digits one by one. Keep pressed for quick correction.
   * Display automatically returns to initial regular timekeeping mode if left unused for a few minutes.
5) Press Ⓑ to complete setting.

SETTING DUAL TIME

1) Press Ⓑ in the dual time mode.
2) Each press of Ⓐ or Ⓛ corrects flashing digits one by one. Keep pressed for quick correction.
3) Press Ⓒ to shift flashing position. The digit(s) to be changed will flash.
   * Display automatically returns to initial dual time mode if left unused for a few minutes.
4) Press Ⓑ to complete setting.   * The Ⓐ button changes 12-/24-hour formats.

FIVE DAILY ALARMS

ON/OFF indicator
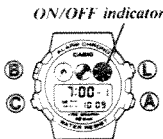
Five daily alarm times can be set independently. The alarm buzzer sounds for 20 seconds at the preset time. To stop the buzzer, press any button.

(Alarm-ON/OFF setting)
In each alarm mode, every Ⓛ button is pressed, the alarm will be ON or OFF. When the time signal is ON, the watch chimes every hour on the hour.

(Presetting alarm times)
1) Press Ⓐ in the alarm mode to select an Alarm No.

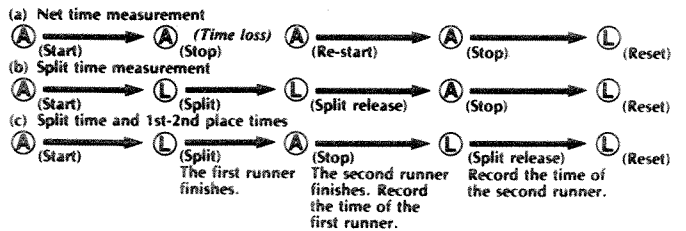Alarm No. 1   Alarm No. 2   Alarm No. 3   Alarm No. 4   Alarm No. 5   Hourly Signals
12:00-1   5:00-2   6:00-3   7:00-4   8:00-5   :00
Press Ⓐ.

2) Press Ⓑ to set new alarm time.
3) Each press of Ⓐ or Ⓛ corrects flashing digits one by one. Keep pressed for quick correction.
4) Press Ⓒ to shift flashing position. The digit(s) to be changed will flash.
   * Display automatically returns to initial alarm mode if left unused for a few minutes.
5) Press Ⓑ to complete setting.
(Sound demonstration) Press and hold Ⓐ in each alarm mode to sound the buzzer.

STOPWATCH OPERATION

A signal confirms start/stop operation.
(Working range) The stopwatch display is limited to 23 hours 59 minutes 59.99 seconds, for longer times reset and started again.

(a) Net time measurement
Ⓐ → Ⓐ (Time loss) Ⓐ → Ⓐ → Ⓛ
(Start) (Stop) (Re-start) (Stop) (Reset)

(b) Split time measurement
Ⓐ → Ⓛ → Ⓛ → Ⓐ → Ⓛ
(Start) (Split) (Split release) (Stop) (Reset)

(c) Split time and 1st-2nd place times
Ⓐ → Ⓛ → Ⓐ → Ⓛ → Ⓛ
(Start) (Split) (Stop) (Split release) (Reset)
The first runner finishes. The second runner finishes. Record the time of the first runner. Record the time of the second runner.

COUNTDOWN ALARM OPERATION

The countdown can be set from one minute to 24 hours (Display shows 0:00), and times to an accuracy of 1/10th of a second.
Start/stop operation is possible by pressing the Ⓐ button and is confirmed by a signal.
When the display reaches zero, the buzzer will sound for 10 seconds unless any button is pressed.

(Repeat function) When the display reaches zero, the pre-entered time is retrieved automatically.
(Pre-entering countdown alarm time)
1) Press Ⓑ to set new countdown alarm time.
2) Each press of Ⓐ or Ⓛ corrects flashing digits one by one. Keep pressed for quick correction.
3) Press Ⓒ to shift flashing position. The digit(s) to be changed will flash.
   * Display automatically returns to initial countdown alarm mode if left unused for a few minutes.
4) Press Ⓑ to complete setting.